 


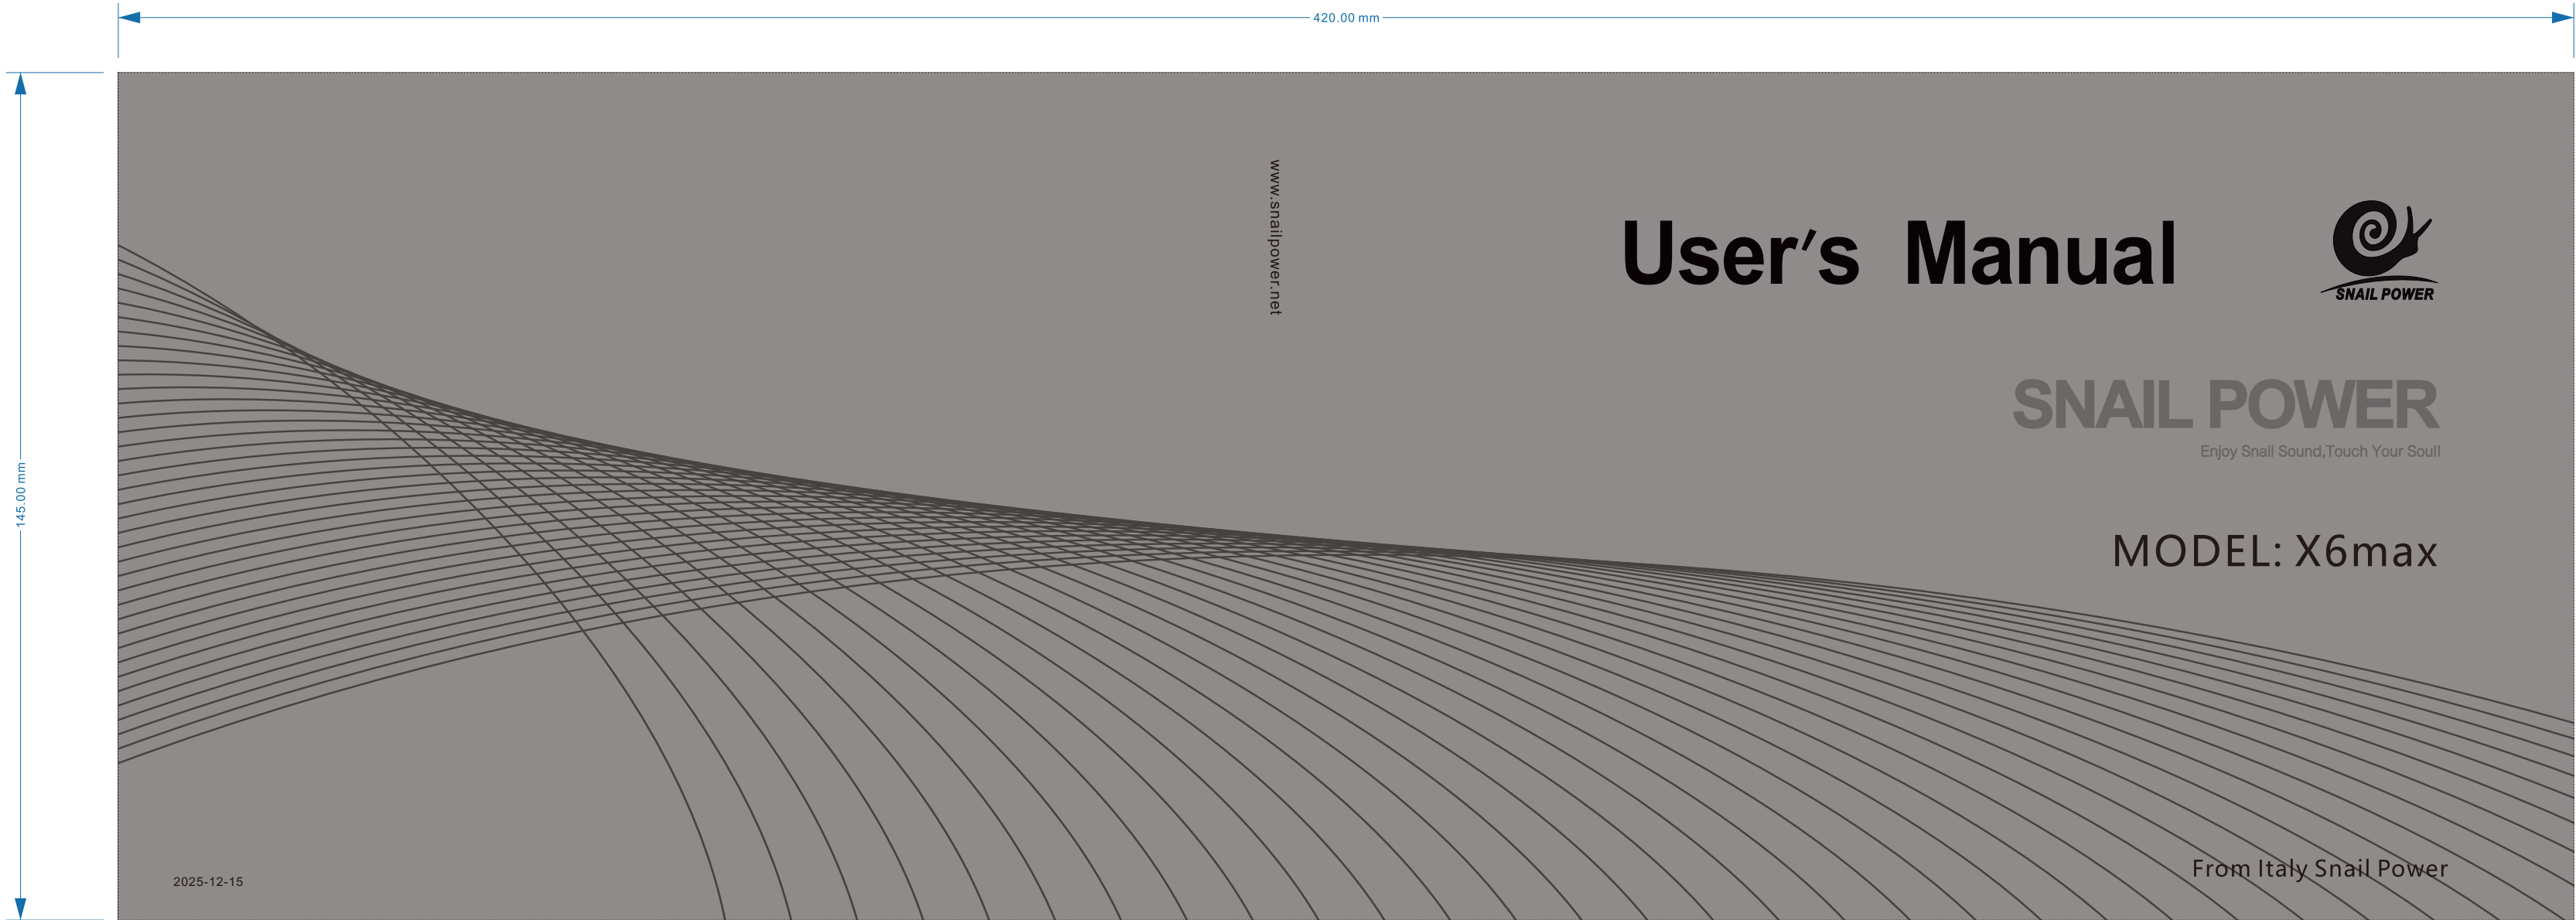

www.snailpower.net

User's Manual



SNAIL POWER

Enjoy Snail Sound, Touch Your Soul!

MODEL: X6max

2025-12-15

From Italy Snail Power

Warranty Policy and Customer Service Information

Thank you for purchasing SNAIL POWER products. If there is a product quality problem within 12 months from the date of purchase, you can enjoy the company's warranty service.

NOTES:

- 1. A valid proof of purchase must be issued by the seller when purchasing.
- 2. The warranty card and proof of purchase should be properly kept by the user and cannot be lost, no repeat issuing if lost.
- 3. if the product appear for the causes of failure, the user can use the warranty card and purchase certificate

Non-warranty Situation:

During the user's operation, those that meet one of the following conditions are not covered by the warranty.

 
- 1. The warranty period is exceeded.
- 2. Damage caused by failure to use in accordance with the requirements in the user's instruction manual.
- 3. Damage caused by human factors.
- 4. Failures caused by unauthorized disassembling, repair, and modification of products.
- 5. Damage caused by force majeure factors (such as floods, earthquakes, lightning, etc.).
- 6. No warranty card, invoice or warranty card does not match the invoice information.
- 7. The product wears out naturally.
- 8. Failure and damage caused by other non-product quality problems.

X6max


1: Product features

- Ci custom installation;
- Fully sealed cabinet for a stunning music experience;
- All materials used comply with the ROHS standards;
- It brings more portable installation and an ultimate experience to living room cinemas, background music systems, and professional conference systems.

3: Standard Accessories

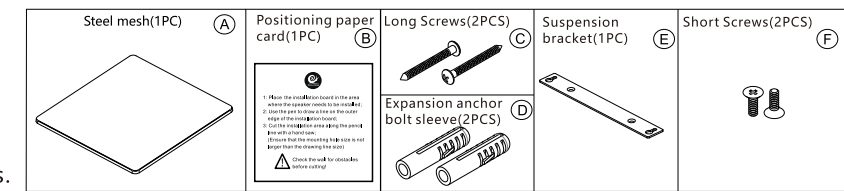

4: Finished product size drawing

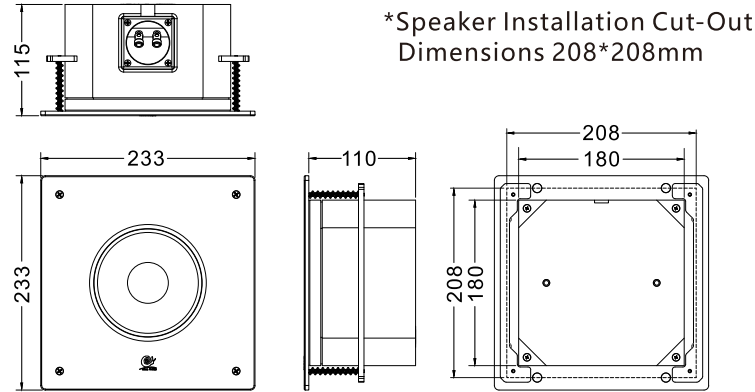 

X6max

5: Installation Instructions

A: Ceiling Flush-Mount Installation Steps

①

As shown in the illustration place the installation template (B) on the ceiling where the speaker will be installed and trace around its outer edge with a pencil.

②

As shown in the illustration use a hand saw to cut out the area along the traced line. Caution: The cut-out area must not be larger or smaller than the traced line.

 
③

As shown in the illustration connect the speaker wires (red = positive, black = negative), then insert the completed speaker into the cut-out area.

④


As shown in the illustration press both side aluminum plates toward the cabinet by hand; the speaker has a 15° beveled edge. Hook one plate into the ceiling first, then lift the other side up and into the ceiling until the speaker sits flush.

X6max

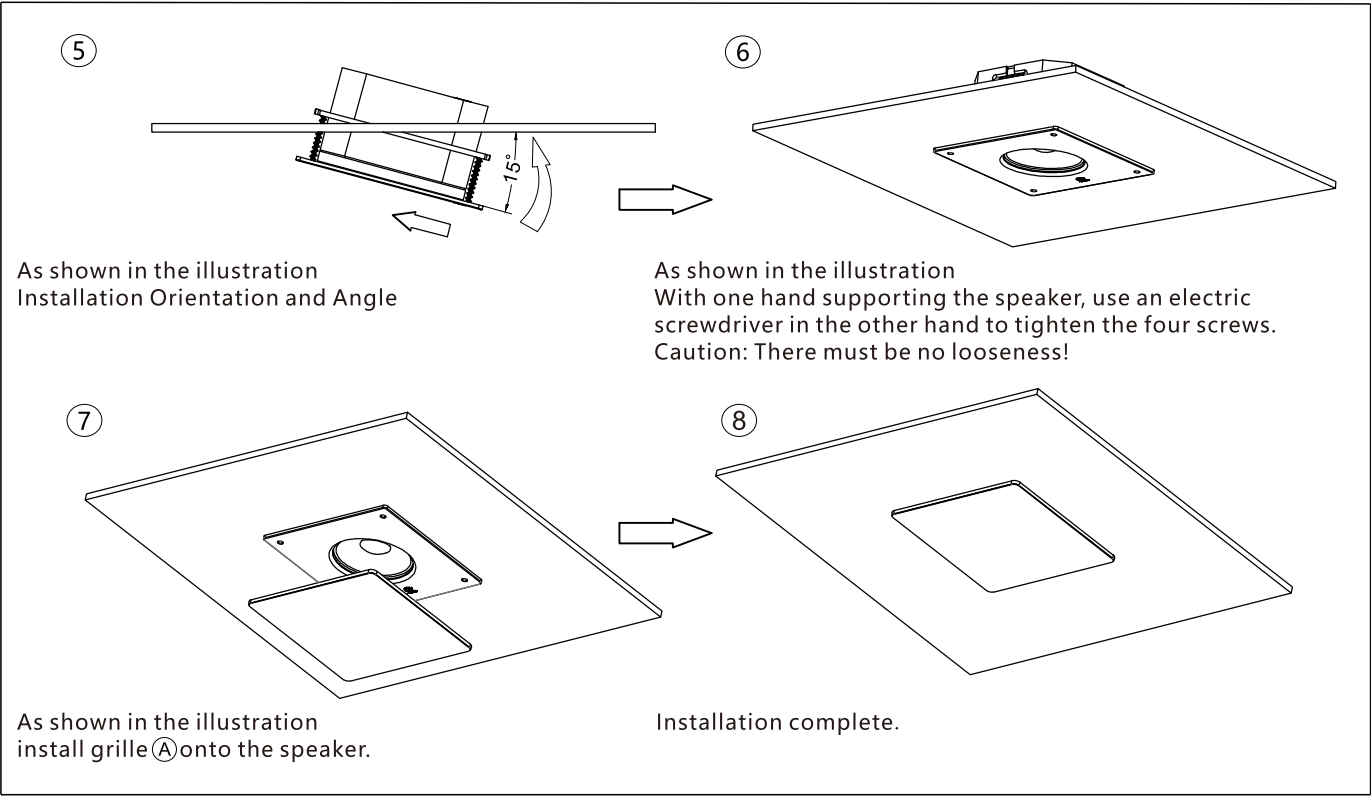

X6max

 
B: Wall Flush-Mount Installation Steps

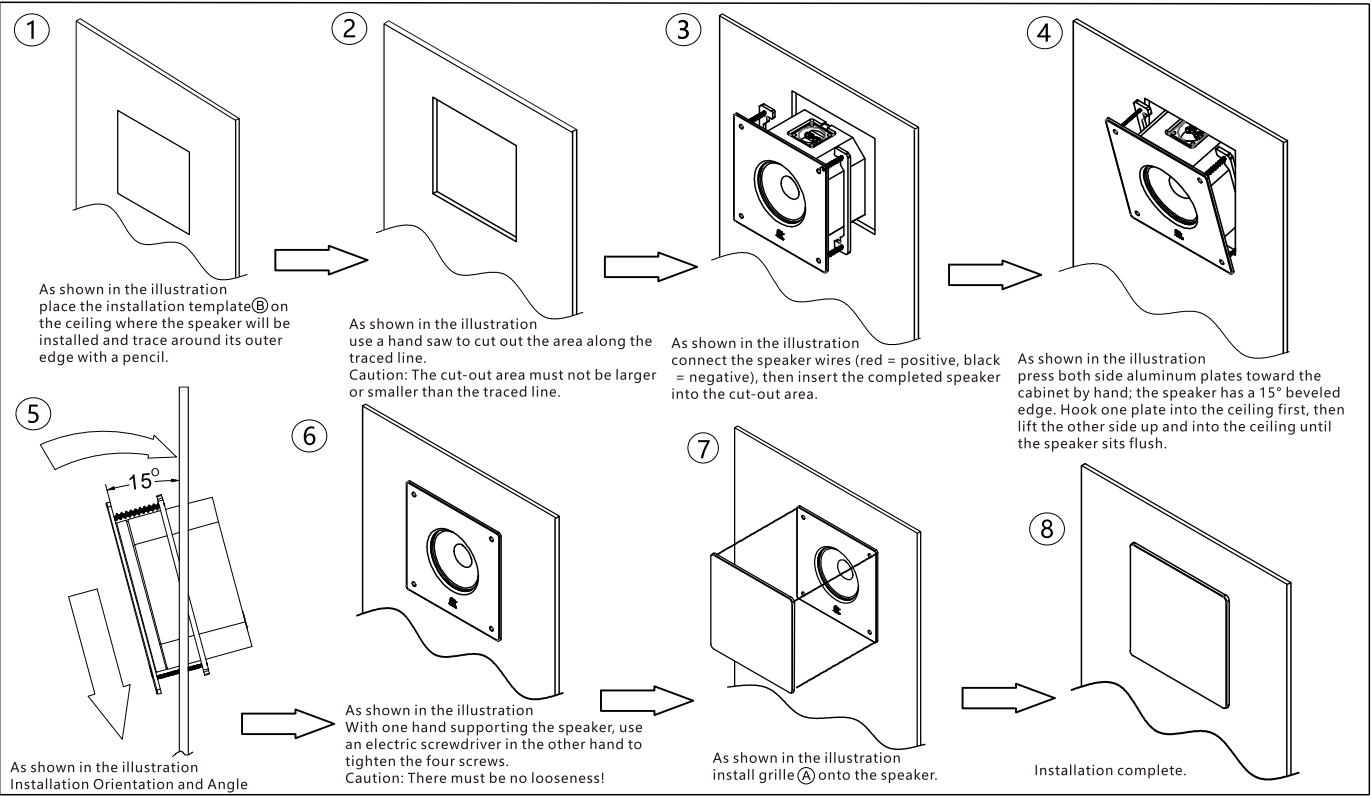

X6max

C: Ceiling Suspension Installation Steps

 
As shown in the illustration
Place the suspension bracket ⑤ on the wall and mark the center position of the screw with a pen. Remove the suspension bracket and use an electric drill (with a Φ7mm drill bit) to drill a hole in the wall. Tap the expansion anchor bolt sleeve ⑥ into the hole, and then screw the screw ③ into the expansion anchor bolt sleeve.

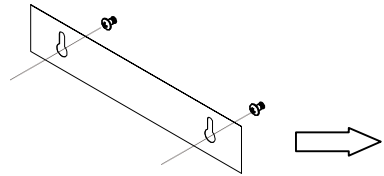


Note: After tightening, 5 mm of screw thread must remain exposed.

① ②

 Use screw ④ to secure the suspension bracket ⑤ to the back of the speaker.
Caution: No looseness allowed.

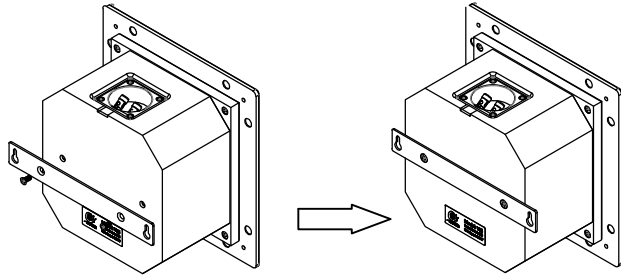


③ ④

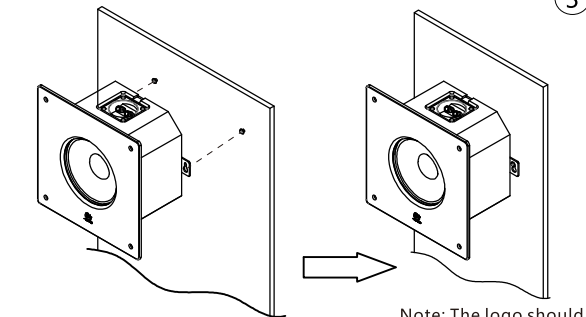 

Fit the speaker with the installed suspension bracket over the screw head on the wall.

 Note: The logo should face downward.

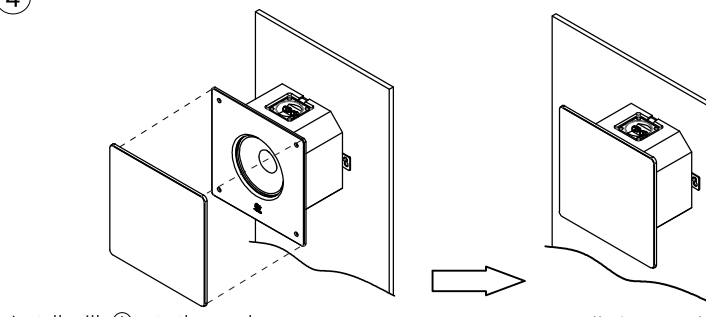

Install grille ① onto the speaker.

Installation complete.

X6max

IMPORTANT SAFETY INFORMATION



! This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

⚡ This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

Read these instructions.
Keep these instructions.
Heed all warnings.
Follow all instructions.
Do not use this apparatus near water.
Clean only with cloth.
Do not block any ventilation openings.
Install in accordance with the manufacturer's instructions.
Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

Do not defeat the safety purpose of the polarised or grounding plug. A polarised plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus. Only use attachments/accessories specified by the manufacturer. Unplug the apparatus during lightning storms or when unused for long periods of time. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been exposed to rain or moisture, does not operate normally, or has been dropped. CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. No naked flame sources, such as lighted candles, should be placed on the apparatus. WARNING: The mains plug/appliance coupler is used as disconnect device shall remain readily operable.

X6max



Correct disposal of this products. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or humanhealth from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



This equipment is a class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

ROHS hazardous substances management

Hazardous substance	crossover	Wire	Drive	Iron grille	Enclosure	Accessories
Pb	☐	☐	☐	☐	☐	☐
Hg	☐	☐	☐	☐	☐	☐
Cd	☐	☐	☐	☐	☐	☐
Cr,Vi	☐	☐	☐	☐	☐	☐
PBB	☐	☐	☐	☐	☐	☐
PBDE	☐	☐	☐	☐	☐	☐

Indicating that the content of the hazardous substances in all homogeneous materials of the components are under the limit requirements in GB/T26572011.

X6max

SERVICE CARD

I hope our sincerely services can accompany you life.
Your praise is our greatest power for making progress!

 Genuine guarantee  Invoice

After-sale service card

✓15days replacement
1.Commodity quality problem.
2.Logistics damage.
3.accessories are not missing.

✓12months warranty
1.Within the warranty period.

!

⌚ The following conditions don't enjoy 7 days replacement service:
1.Product quality problems caused by man-made damage;

⌚ 2.Vexatious request for replacement;
The following conditions don't enjoy 12 months warranty:
1.The warranty period has expired;
2.The quality of goods caused by man-made damage.

CAUTIONS

Warm tips:
1.We don't accept the freight collect and postage when you return the goods!
2.Please ensure that the product is intact when you return. If you are not satisfied with the gift, please return the gift with products together.

First of all, sincerely apologize to you for whatever reason to return, we are extremely sorry!
If you haves any questions,please communicate with us promptly, we will solve it for you as soon as possible!
Web:www.snailpower.net

After-sale service registration from

Customer information

Name: _____ Telephone: _____

E-mail: _____ Postal code: _____

Address: _____

Product information

Model: _____ Product barcode: _____

Finishing: _____ Serial number: _____

Order number: _____ Delivery number: _____

Dealer information

Dealer Name: _____ Telephone: _____

Address: _____

The reason for return: _____

Problem description: _____

Others: _____

Return requirements:

☐ Return ☐ Replacement



保修政策和客户服务信息

感谢您购买 SNAIL POWER 产品。如果自购买之日起12个月内出现产品质量问题，您可以享受公司的保修服务。

注意：

- 1.购买时卖方必须出具有效的购买证明。
- 2.保修卡和购买凭证由用户妥善保管，不得丢失，丢失后不得重复发放。
- 3.如果本产品出现非人为原因造成的故障，用户可使用保修卡和购买证书在保修期内到客户服务中心进行维修。

非保修情况：

在用户操作过程中，满足以下条件之一且不在保修范围内的设备。

- 1.超过保修期。
- 2.未按照用户使用说明书的要求使用而造成的损坏。
- 3.人为因素造成的损害。
- 4.未经授权的产品拆卸、维修和修改导致的故障。
- 5.不可抗力因素（如洪水、地震、雷电等）造成的损害
- 6.无保修卡、发票或保修卡与发票信息不匹配。
- 7.产品自然磨损。
- 8.其他非产品质量问题造成的故障和损坏。

X6max




一：产品特性

- Ci定制安装;
- 全密封箱体,震撼的音乐享受;
- 所用的材料均符合ROHS标准;
- 为客厅影院,背影音乐,专业会议系统带来更便携的安装及极致体验;

二：技术参数


喇叭单元:	1x6" LF Driver,1x1" HF compression driver
频响范围:	70Hz-22KHz(±3dB);
最大功率:	400W RMS short-term;
灵 敏 度:	91dB/W/m;
最大声压:	115dB;
标称阻抗:	8Ω;
产品净重:	4KG(单只)
产品尺寸:	233*233*115mm
开孔尺寸:	208*208mm,深度>110mm

   三：标配附件

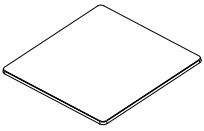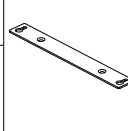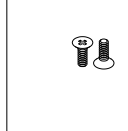钢网(1PC) (A)	安装定位纸板 (1PC) (B)	长螺丝 (2PCS) (C)	吊挂架 (1PC) (E)	短螺丝 (2PCS) (F)
				
		膨胀螺丝塞 (2PCS) (D)		
				

X6max

 四：成品尺寸图

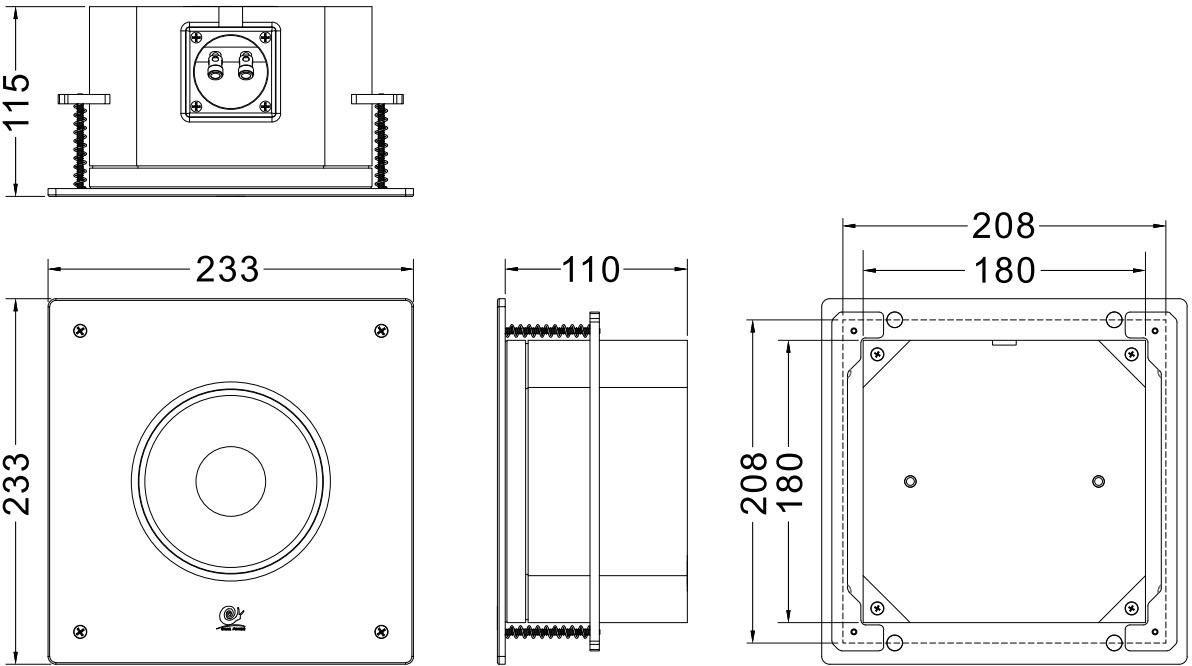


*音箱安装开孔尺寸208X208mm

X6max

五：安装说明


A：天花嵌入安装步骤

 ①

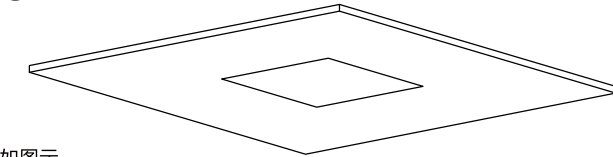


如图示
把安装定位纸板(B)放置在需安装音箱的区域,用
铅笔沿纸板外缘画线条一周.

 ②

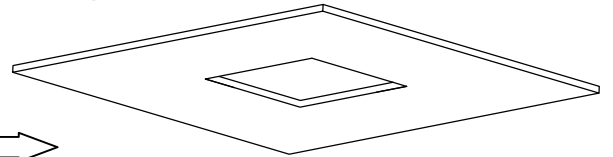


如图示
用手锯沿画线将中间区域切除.
注意:切除区域不可大于或小于画线区域

 ③

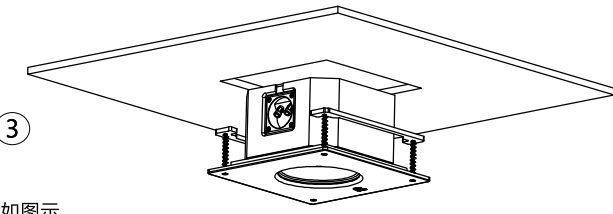

如图示
将成品音箱的电线连接好(红色为正极,黑色为负极);
然后将音箱套于切除区域内.

 
④

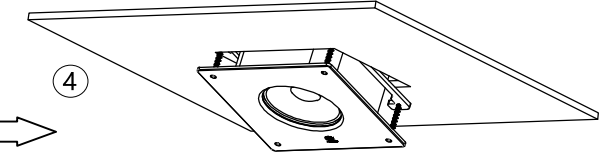

如图示
用手将两侧铝板往箱体部位按压,音箱与天花成15度
斜边,先将一边铝板装入天花内,另一边往上套于天花
内,将音箱平放.


X6max

 ⑤

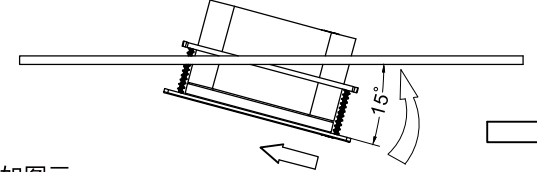


如图示
安装方向及角度.

 ⑥

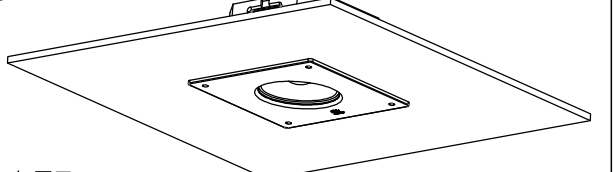


如图示
用一只手托住音箱,另一只手用电动
螺丝刀将四个螺丝锁紧.
注意:不可有松动!

 ⑦

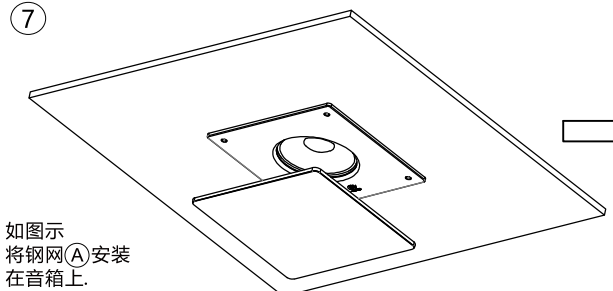

如图示
将钢网(A)安装
在音箱上.

 ⑧

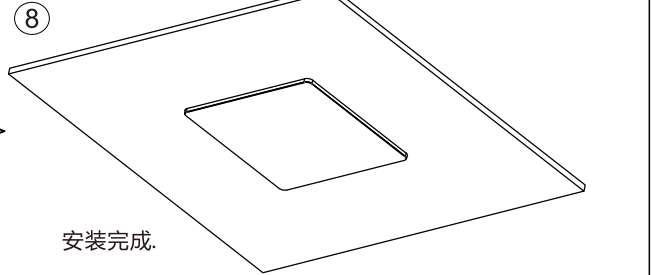


安装完成.

X6max


B: 墙壁嵌入安装步骤

 ①

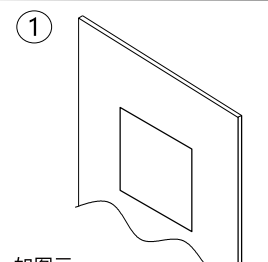


把安装定位纸板(B)放置在需安装音箱的区域,用铅笔沿纸板外缘画线条一周.

 ②

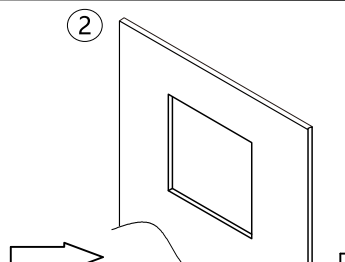


用手锯沿画线将中间区域切除.注意:切除区域不可大于或小于画线区域.

 ③

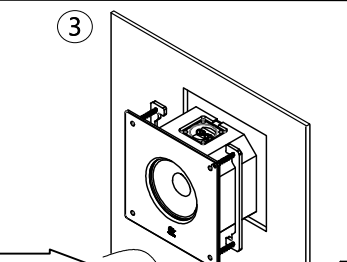


将成品音箱的电线连接好(红色为正极,黑色为负极),然后将音箱套于切除区域内.

 ④

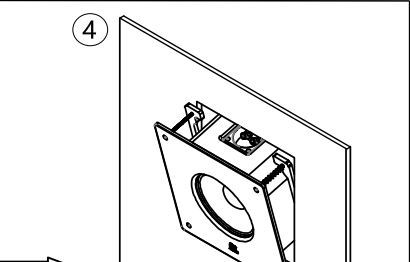


用手将两侧铝板往箱体部位按压,音箱与墙壁成15度斜边,先将一边铝板装入墙壁内,另一边往上套于墙壁内,将音箱平放.

 ⑤

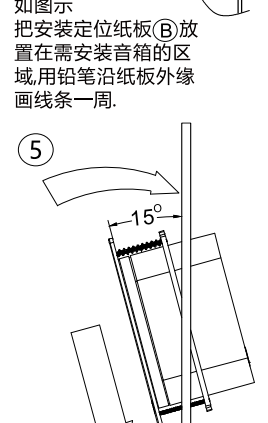


15°
安装方向及角度

 ⑥

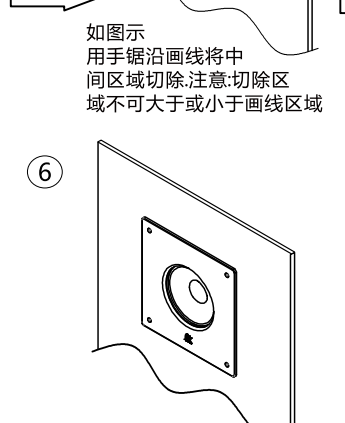


用一只手托住音箱,另一只手用电动螺丝刀将四个螺丝锁紧.注意:不可有松动!

 ⑦

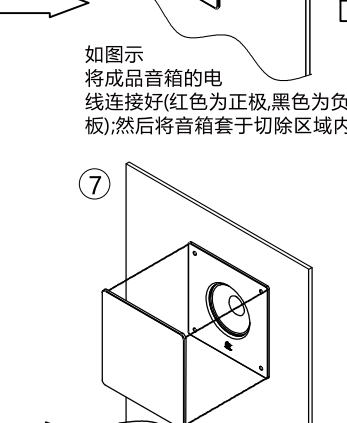

将钢网(A)安装在音箱上.

 ⑧

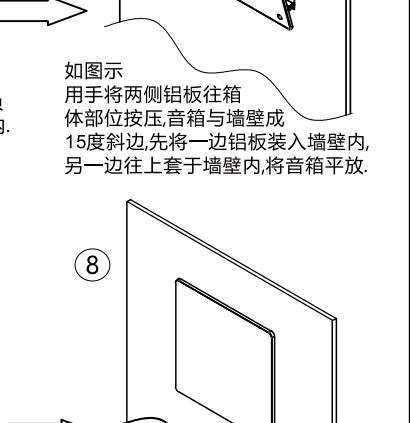


安装完成.

X6max


C: 吊装安装步骤

 把吊挂架(E)放在墙壁上,用笔标记好螺丝中心位置,取下铁片,用电钻(配Φ7mm钻头)在墙壁上钻孔,将膨胀螺丝塞(D)敲入孔内,然后把螺丝(C)锁入膨胀螺丝塞内

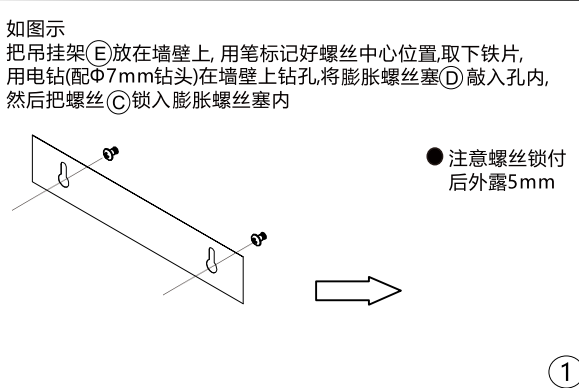


● 注意螺丝锁付后外露5mm

 ①

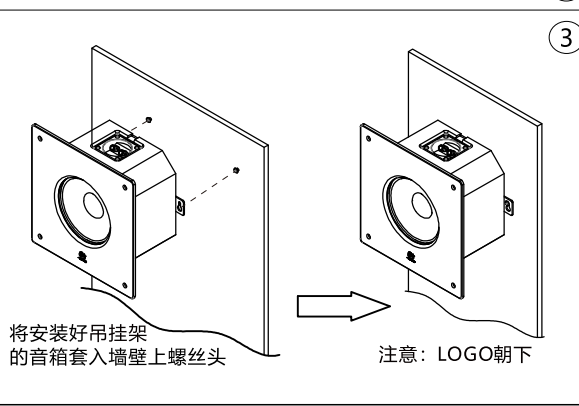


将安装好吊挂架的音箱套入墙壁上螺丝头

 ②

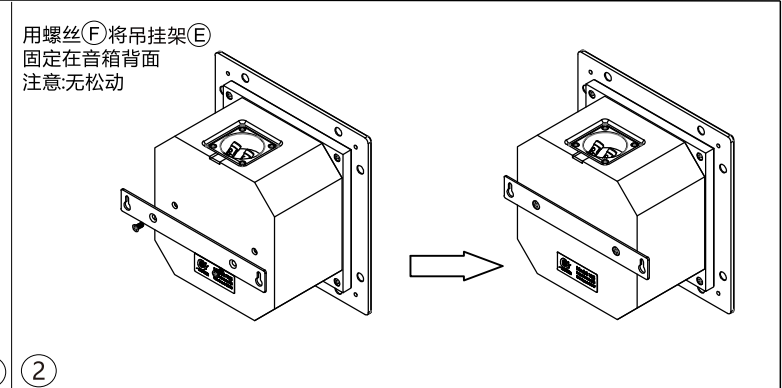


用螺丝(F)将吊挂架(E)固定在音箱背面.注意:无松动

 ③

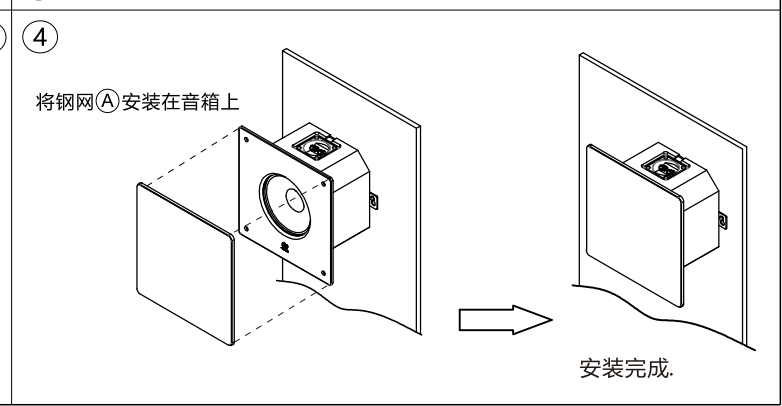

将钢网(A)安装在音箱上

 ④



安装完成.

X6max

重要的安全提示



警告!

小心触电
请勿打开



为减少触电的风险，请勿私自拆开面板，机身内部无任何用户可自行更换的零部件，如果出现异常，请咨询专业人员。



此标志表示包装盒内附带有重要的操作指引和维修说明书。



此标志表示机身存在的高电压有可能引起触电风险。

- 请阅读此说明书。
- 请保留此说明书。
- 请留意所有的警告标示。
- 请遵循所有的操作说明。
- 请勿将本产品靠近水源。
- 仅能使用干布清洁机身。
- 请勿阻塞各通风口。
- 请按生产商的说明书进行安装操作。

请勿靠近任何热源进行安装，比如散热器、热调温器、火炉及其他散热设备（包括功放）。

请勿损坏带极性插头或接地型插头的安全性能。带极性插头一般有两个宽度不一的插片而接地型插头除这两个插片外还带一个接地插片，其中稍宽点的插片及接地插片是为了保障用户安全而提供。如果产品上的插头与用户插座不匹配，请咨询相关专业人士更换合适的插座。

保护好电源线，避免被踩踏或碾压，尤其是插头、便捷式插座及设备输出端口处。

仅使用厂商所指定的附件或零件。

雷电天气或长时间不使用该产品时，请将电源插头拔出。所有的维修服务，请咨询专业的维修人员。当产品出现以下任何形式的损坏时可以要求维修，比如电源线或插头损坏、液体溅入或设备内掉入异物、产品淋雨受潮、非正常操作或产品被摔落等情况。

警告：为减少火灾及电击的危险，请勿将产品淋雨受潮。产品不能够被溅湿，请勿将任何装有液体的容器如花瓶放在本产品上方。
请勿将任何明火放置于产品上面，如蜡烛。
警告：电源插头被作为本产品的断电装置，请保持插头能进行方便操作。

X6max



该标志表明本产品报废后应进行合理的处 置且不能与生活垃圾一同处理。为了防止对环境及人体健康可能造成的危害，可对该产品进行合理回收以促进材料的可持续使用。如果要退回该产品，应通过正规的回收渠道进行回收或联系此产品的经销商，他们可对其进行无公害的安全回收。



该产品已符合II类设备的安全要求，电源连接时不需要接地。

ROHS有害物质管理

有毒&有害物质	分 音 器	电 线	喇 叭	铁 网	箱 体	附 件
铅 (Pb)	○	○	○	○	○	○
汞 (Hg)	○	○	○	○	○	○
镉 (Cd)	○	○	○	○	○	○
六价铬 (Cr,Vi)	○	○	○	○	○	○
多溴联苯 (PBB)	○	○	○	○	○	○
多溴联苯醚 (PBDE)	○	○	○	○	○	○

表示该有毒有害物质在该部件所有均质材料中的含量均在GB/T26572011规定的限量要求以下。

SERVICE CARD

售后服务保障卡

希望我们的真诚服务 能够陪伴你一生
您的好评是我们进步的最大动力!

 正品保障  提供发票

售后服务

✓ 7天包换

1.商品质量问题!
2.物流造成商品损坏!
3.配件完整无缺!

✓ 12个月保修

1.确定在保修时效之内!



注意事项

① 以下情况,不享受7天包换服务:

1.人为因素造成产品质量问题!
2.本人主观因素,无理取闹要求换货者!

② 以下情况,不享受12个月保修服务:

1.保修服务时效过期!
2.人为损坏造成产品质量问题!

温馨提示:
1.退换货快递不接受到付件及平邮!
2.办理退货,请确保产品完好,如不满足满赠要求,请将赠品一并退回

首先真诚的向您道歉,无论任何原因让您需要退换货,我们都致以万分歉意!
如果您有任何问题,请及时与我们沟通,我们都尽快为您解决!
官网: www.snailpower.net

售后服务登记表

用户信息

姓 名: _____ 联系电话: _____

电子邮件: _____ 邮政编码: _____

家庭地址: _____

产品信息

机种型号: _____ 产品条码: _____

表面处理: _____ 序 列 号: _____

订购单号: _____ 发货单号: _____

经销商信息

销售商名称: _____ 联系电话: _____

地 址: _____

退换原因: _____

问题说明: _____

其他说明: _____

退换要求: ☐ 退货 ☐ 换货

